



Features and Benefits

- Slim design for room applications
- Easy installation with LED indication
- Built-in circuitry diagnostics
- Optional set point, momentary button and LCD available

Technical Overview

Using a NDIR (non-dispersive infrared) sensor for measuring CO₂ concentrations and utilizing ABC (Automatic Baseline Correction) ensures accurate and maintenance free operation.

There is also an optional direct resistive temperature output as well as an optional backlit LCD display, set point adjust & momentary switch.

A feature of this sensor is when in 3-wire mode it automatically detects the controller input type, 4-20mA or 0-10Vdc. This can be overridden via a DIP switch if required. Sensors have on-board LED indication for power up status, output mode type and useful self-test feature.

Product Codes

GS-CO2-S	Space CO ₂ and Temperature Sensor 0-2000ppm
GS-CO2-RHT-S	Space CO ₂ humidity and Temperature Sensor 0-2000ppm

Suffixes (replace -T with type)

-T Direct resistive temperature output *

Thermistor types:

A (10K3A1)	B (10K4A1)	C (20K6A1)
H (SAT1)	K (STA1)	L (TAC1)
M (2.2K3A1)	N (3K3A1)	P (30K6A1)
Q (50K6A1)	S (SAT2)	T (SAT3)
W (SIE1)	Y (STA2)	Z (10K NTC)

Platinum types:

D (PT100a)	E (PT1000a)
------------	-------------

Nickel types:

F (NI1000a)	G (NI1000a/TCR (LAN1))
-------------	------------------------

Interface Options (add to part code)

-HR	0-5000ppm CO ₂ range
-SP	Resistive set point 0-10kΩ or 11-1kΩ
-MS	Momentary switch
-TR	Custom temperature range between -20 & +50°C
-LED	3-Colour LED indication for CO ₂ levels
-LCD	Integral LCD

-5V Output 0-5Vdc (instead of 0-10Vdc)

Accessories

DECOR	Decorators trim plate
GASKET	Insulating gasket (pack of 10)

Note*:

When using the -T option, the thermistor is not compensated for internal self heating.

Specification

Outputs:	3-wire (optional -T)	0-10Vdc (0-5V for -5V) or 4-20mA PTC/NTC resistive sensing element
Power Supply:		24Vac/dc ±10% (3-wire) 24Vdc ±10% (2-wire)
Supply current:		30mA (3-wire) max.
Electrical connections		Pluggable spring loaded terminal block min. 0.2mm ² , max. 1.5mm ²
Output ranges:		
	CO ₂	0-2000ppm (optional 0-5000ppm)
	Temperature	0 to 40°C
	RH	0 to 100%
Environmental:		
	Housing:	-10 to 60°C 0 to 95% non-condensing
Housing:		
	Material	ABS (flame retardant)
	Dimensions	115 x 85 x 30mm
Protection		IP30
Country of origin		UK
Conformity		EMC, CE & UKCA Marked

WEEE Directive:



At the end of the products useful life please
dispose as per the local regulations.
Do not dispose of with normal household waste.
Do not burn.



Sensor Characteristics

Carbon Dioxide

Measurement interval	2 seconds
Accuracy	±70ppm ±3% of reading
Pressure dependency	+1.6% reading per kPa deviation from normal pressure
Response rate	2 minutes by 90%

Temperature

Measurement range	0 to 40°C
Accuracy (20 to 40°C)	±0.5°C
Long term stability	<0.02°C p.a.
Response time	8 sec. (t 63%) @ 25°C 1 m/s air flow

Humidity

Measurement range	0 to 100% RH
Type	ASIC
Accuracy (20 to 80% RH):	Typical Maximum ±3% RH ±4% RH

Long term stability	<0.5% RH p.a.
Response time	8 seconds (t 63%) @ 25°C 1 m/s Airflow

Optional Passive Output

Type	Resistive PTC & NTC types
Accuracy:	
Thermistor	±0.2°C 0 to 70°C
Platinum types	±0.2°C @ 25°C
Nickel types	±0.4°C @ 25°C

Set point	Resistive 0-10kΩ or 11-1kΩ ±30%
------------------	---------------------------------

Momentary switch	VFC 24Vac/dc 50mA max.
-------------------------	------------------------

Display Option LCD

To show CO₂ & Temperature plus RH values on GS-CO2-RHT-S versions

Installation



Antistatic precautions must be observed when handling these sensors. The PCB contains circuitry that can be damaged by static discharge.

1. Select a location on a wall of the controlled space which will give a representative sample of the prevailing room condition. Avoid sitting the sensor in direct sunlight, on an outside wall or near heat sources. An idea mounting height is 1.5m from the floor.
2. Undo the tamperproof screw at the bottom of the housing and remove the front panel from the base.
3. Using the base as a template mark the hole centres and fix to the wall with suitable screws. Alternatively the base plate can be mounted on to a conduit box or standard recessed back box. The base plate is suitable for EU & North America fixings.
4. Feed cable through the hole in the base plate of the housing, unplug the terminal block from the PCB and terminate the cores at the loose terminal block. Leave some slack inside the unit as required.
5. Set the switch on the PCB either to the 3-wire position (if fitted). Please refer to "Selecting output mode and LED indication" for more details.

IMPORTANT Do not alter the switch position while sensor is powered up. Do **not** select 2-wire when a 0v connection (3-wire) is made. Permanent damage to the sensor or BMS controller may result.

IMPORTANT Ensure the Terminal Block is fitted the correct position and direction. The cable entry faces the centre of the sensor.

6. Connect all sensor outputs to the controller inputs or to the device, the sensor output(s) are connected to.
7. Before powering the sensor, ensure that the supply voltage is within the specified tolerances.

IMPORTANT Make all electrical output connections before applying the supply voltage. If the sensor is not connected in this sequence, damage may be caused to the input circuitry of the controller or device the sensor output(s) are connected to.

8. Allow 3 minutes before checking functionality, and at least 30 minutes before carrying out pre-commissioning checks. This will allow the electronics time to stabilise.

To perform an accurate comparison between a transmitter output and a portable reference, it is essential that the two probes are held adjacent for a minimum of 30 minutes in a stable RH environment. Only in this way can speed of response and temperature factors be eliminated. It is not uncommon for test instruments and transmitters to disagree by 10% RH or more when site measurements are taken incorrectly. 'Slings' or other mechanical hygrometer should not be used as a reference

Terminal Block:

For easier installation, the terminal block can be detached from the PCB.

When used with ferrules it doesn't require any tools to release the spring loaded terminal block. When used with stranded cable, push in the orange latch to compress the spring load. Feed in the wire and release the spring to secure the wire connection.

IMPORTANT Make sure the Terminal Block is fitted the correct position and direction. The cable entry faces the centre of the sensor.


Electrical Connections:

24V Supply 24Vac/dc
0V Supply 0V (Common 0V)
OP1 CO₂ output
OP2 RH output (GS-CO2-RHT-S ONLY)
OP3 Temp. output
0V Not used
TH1 Direct Thermistor output (-T only)
TH2 Direct Thermistor output (-T only)



FS1 Not used
FS2 Not used
P5 Set point
P6 Set point, wiper
P7 Set point
MS1 Momentary switch
MS2 Momentary switch
OVR Override on LCD

LED Indication:

LOOP Blue
4-20mA Yellow
0-10V Green
ERROR Red

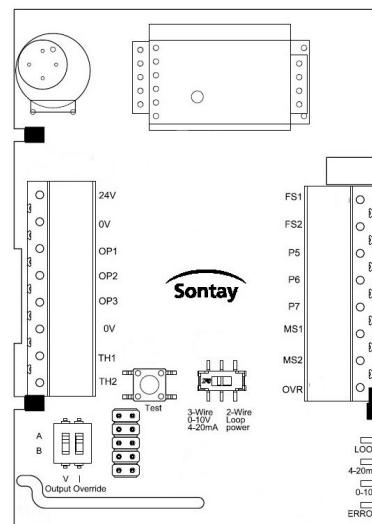


3-wire, 0-10Vdc / (0-5Vdc optional):


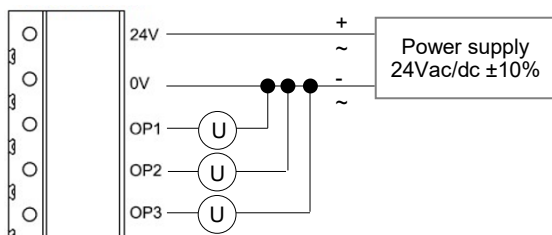


"V" Switch UP

-T, direct resistive output:



3-wire, 4-20mA:

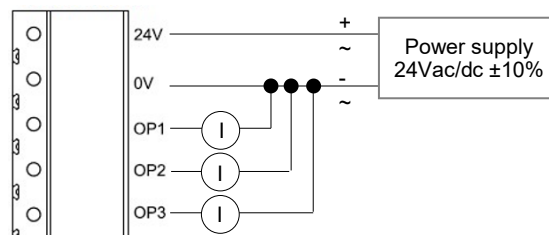

"I" Switch UP

Momentary switch (-MS):
max. 500mA @24Vac/dc

Set point (-SP):

	-	+
P5/P6	0kΩ	10kΩ
P7/P6	11kΩ	1kΩ

See next page for further information on setting output modes.

For 1-11kΩ use the 0-10kΩ and add an inline 1kΩ resistor on the controller input side

Selecting output mode and LED indication:

IMPORTANT Do not alter the switch position while sensor is powered up. Do not select 2-wire if a 0v connection (3-wire) is made. Permanent damage to the sensor or BMS controller may result.

3-wire connection:

Ensure there is no power to the sensor before changing the switch. Set the switch in the left hand position. The sensor automatically sets the outputs to 0-10V or 4-20mA based on the resistive load on the outputs. All outputs MUST be connected to the same type of load:

- If ALL the loads are $>2k\Omega$, all the outputs will be set to 0-10Vdc and the green 0-10V LED will light.
- If ALL the loads are $>50\Omega$ and $<550\Omega$, all the outputs will be set to 4-20mA and the yellow 4-20mA LED will light.
- If ANY of the loads are $<50\Omega$ or >550 and $<2k\Omega$, all the outputs will be switched off and the red ERROR LED will light.

Auto detection can be overridden via 2-way DP switch situated on the left hand side of the PCB.

Set the auto detection 2-way DIP switch to the **3-wire** position

Set the override 2-way switch to:

- Voltage (0-10V/0-5V) switch DIP1 (V) to ON
- Current (4-20mA) switch DIP2 (I) to ON

The ON position for the switch is labelled on the switch itself.

Example, if you set the V switch (left) to OFF and the I switch (right) to ON, the device will force 3-wire current mode. The device is also set up to detect a change on these switches and reboot itself after 5 seconds - the error LED will flash during this period then the yellow 4-20mA LED will illuminate.

2-wire connection:

Ensure there is no power to the sensor before changing the switch and do not connect 0V. Set the switch in the right hand position. All outputs MUST be connected. The blue LOOP LED will light.

The LEDs will switch off after 15 minutes.

Self-Test Button:

The self-test button helps the installer to validate the wiring for each output and helps to commission the system.


When self-test button is pushed it cycles all outputs as follows: 0%, 50%, 100%, normal operation. After 30 seconds in any mode the system resets to normal operation.

When self-test button is held for more than 3 seconds, it sets all outputs to 50%, when released the outputs return to normal operation.

LED CO₂ Level Indication

The LED is configured to turn from green to amber when the CO₂ level rises above 1000ppm. The colour changes to red when the CO₂ level exceeds 1500ppm. These levels are customizable, but alternative values **MUST** be stated when ordering, as they cannot be changed on site.

Dimensions:

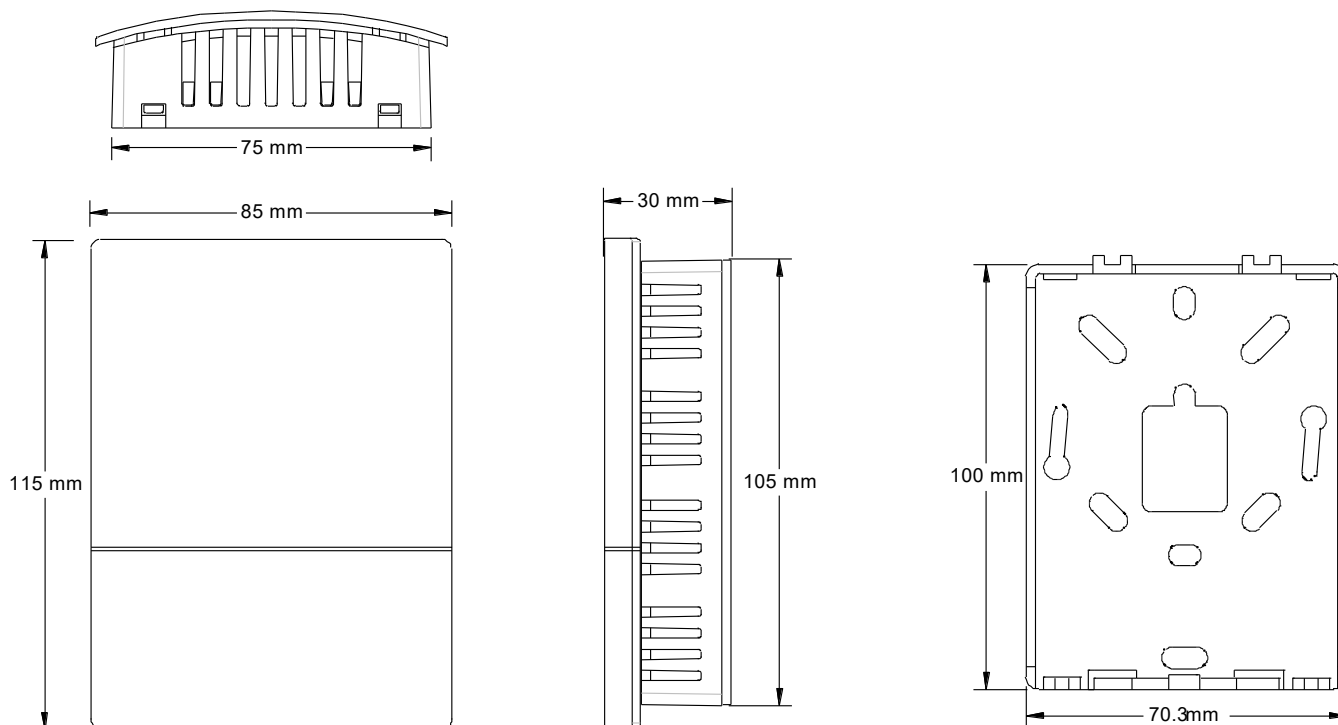

Revision History:

Rev.	Description of change	Page No.	Date
7.4	Output type override & dimensions	3, 4 & 5	11/08/2022
7.3	UKCA added	1	18/05/2022
7.2	Change over of outputs, OP1 & OP2	3	14/04/2020
7.1	LED status	4	31/01/2020
7.0	New product	All	13/11/2019

Whilst every effort has been made to ensure the accuracy of this specification, Sontay cannot accept responsibility for damage, injury, loss or expense resulting from errors or omissions. In the interest of technical improvement, this specification may be altered without notice.